

[See all 19 Products in Family](#)

10mm Aperture VIS/NIR Fiber Optic Collimator, SMA



Fiber Optic Collimator, SMA (SMA adapter inserted)



Stock **#88-180** [CONTACT US](#)

⊖ 1 ⊕ **\$\$352⁰⁰**

ADD TO CART

Volume Pricing	
Qty 1-10	\$\$352.80 each
Qty 11-24	\$\$312.20 each
Qty 25-49	\$\$292.60 each
Need More?	Request Quote

Product Downloads

General

Fiber Collimator **Type:**

0.22 **Compatible Fiber NA:**

Anodized Aluminum **Housing Material:**

Note:

Compatible with #88-182, #88-183, #88-184, #88-185, #88-186, & #88-187 Refocusing Assemblies

Physical & Mechanical Properties

15.88 **Diameter (mm):**

10.0 **Aperture Size:**

34.29 **Length (mm):**

Optical Properties

N-BK7 **Substrate:**

350 - 2200 **Wavelength Range (nm):**

compatible 400 to 800 **Fiber Diameter (µm):**

18.00 **Focal Length FL (mm):**

Hardware & Interface Connectivity

SMA **Connector:**

Environmental & Durability Factors

-40 to 100 **Operating Temperature (°C):**

Regulatory Compliance

Compliant **RoHS 2015:**


Compliant **Reach 209:**

View **Certificate of Conformance:**

Product Details


- Can Be Coupled to Standard 0.22 NA Fiber Optic Cables
- Options Available for UV-VIS or VIS-NIR
- Multiple Focal Length or Aperture Options

Focusable Collimators consist of two separate components: a fiber optic collimator and a fiber optic refocusing assembly. The fiber optic collimator utilizes a PCX lens positioned at the focal length from the optical fiber tip. These collimators are available with FC or SMA threads, and easily couple to standard 0.22 NA fiber optic cables. Focusable Collimators expand the beam and decrease the divergence by the ratio of the fiber core diameter to the collimator aperture. Fiber optic refocusing assemblies mount directly to the fiber optic collimator and allow for optimal focus at a given distance.

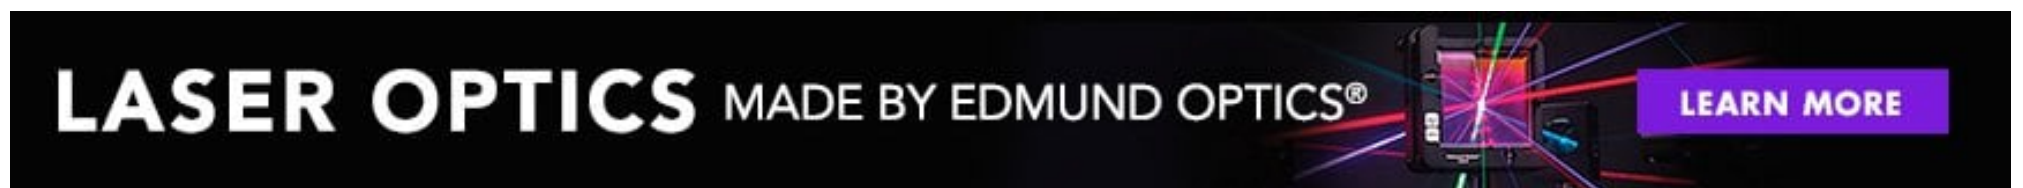


Technical Information

Fiber with 4mm Aperture Fiber Optic Collimator

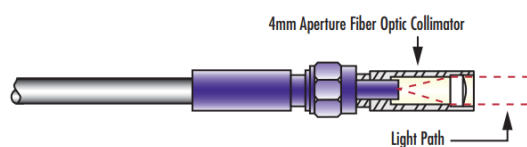


The 4mm Aperture Fiber Optic Collimator threads directly onto FC or SMA fiber.

Fiber with 10mm Aperture Fiber Optic Collimator

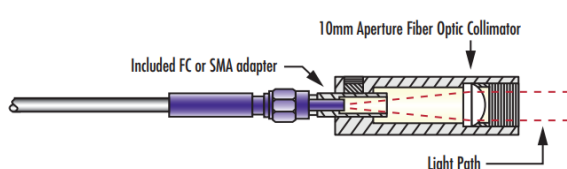

Each 10mm Aperture Fiber Optic Collimator includes an FC or SMA adapter that is inserted into the collimator and locked by a set screw.

Fiber with 10mm Aperture Fiber Optic Collimator and Refocusing Assembly

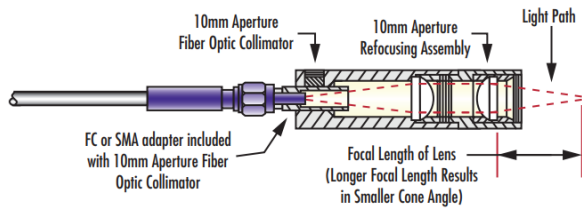

A 10mm Aperture Refocusing Assembly can then be directly threaded onto the 10mm Aperture Fiber Optic Collimator.

Collimator Description	Stock Number	Compatible Refocusing Assembly
4mm Aperture UV/MS Fiber Optic Collimator, FC	#88-189	No Compatible Refocusing Assemblies
4mm Aperture UV/MS Fiber Optic Collimator, SMA	#88-173	No Compatible Refocusing Assemblies
4mm Aperture VIS/NIR Fiber Optic Collimator, FC	#88-188	No Compatible Refocusing Assemblies
4mm Aperture VIS/NIR Fiber Optic Collimator, SMA	#88-172	No Compatible Refocusing Assemblies
10mm Aperture UV/MS Fiber Optic Collimator, FC	#88-191	#88-182 , #88-183 , #88-184 , #88-185 , #88-186 , & #88-187
10mm Aperture UV/MS Fiber Optic Collimator, SMA	#88-181	#88-182 , #88-183 , #88-184 , #88-185 , #88-186 , & #88-187
10mm Aperture VIS/NIR Fiber Optic Collimator, FC	#88-190	#88-182 , #88-183 , #88-184 , #88-185 , #88-186 , & #88-187
10mm Aperture VIS/NIR Fiber Optic Collimator, SMA	#88-180	#88-182 , #88-183 , #88-184 , #88-185 , #88-186 , & #88-187