

[See all 25 Products in Family](#)

Corning® Varioptic® - Variable Focus Liquid Lens, Driver Board with Maxim MAX14574  
Driver and I2C/DC Input



Corning® Varioptic® Variable Focus Liquid Lens Driver Board with Maxim MAX14574 Driver and I2C/DC Input



Stock **#12-248** 7 In Stock

-

1

+

S\$407<sup>.00</sup>

ADD TO CART

| Volume Pricing |                               |
|----------------|-------------------------------|
| Qty 1+         | S\$407.00 each                |
| Need More?     | <a href="#">Request Quote</a> |

Product Downloads

General

**Note:**  
This board includes a MAX 14574 Maxim driver and various FPC connectors (4 pin and 6 pin). It has a 4 pin JST connector for DC power supply and for I<sup>2</sup>C communication. It has been designed for fast driving of the adjustable lens directly from a microcontroller, an FPGA, a DSP, etc. A cabled JST connector is supplied with the board.  
**When used with an A-39Nx lens, the jumper in ST2**

must be removed to ensure optimal performance and product lifetime. Watch this [video](#), or view the Technical Information tab, for more information

Physical & Mechanical Properties

23 x 18 x 8

Dimensions (mm):

Regulatory Compliance

Compliant

RoHS 2015:

Compliant

Reach 224:

View

Certificate of Conformance:

Product Details


- Vary Focal Length by Applied Voltage
- Ideal for Machine Vision Autofocus Applications
- Less Power Required than Traditional Autofocus Lenses
- Development Kits and Lenses with Thermistor Available

Corning® Varioptic® Variable Focus Liquid Lenses consist of a conductive liquid deposited on a flat, conductive substrate. Applying a voltage between the substrate and the liquid causes an insulated material within the liquid to change shape, yielding a variable focal length. These lenses are designed with a stable optical axis, can operate regardless of orientation, and feature AR Coatings optimized for excellent transmission between 400 and 700nm. Corning® Varioptic® Variable Focus Liquid Lenses are ideal for autofocus applications, and with no moving parts, they are faster, more durable, and consume less power than traditionally actuated autofocus lenses. The 1.6mm aperture lens is the smallest liquid lens currently available and specifically designed for ultra-compact cameras, such as barcode engines, industrial and medical endoscopes. A 2.5mm aperture lens for high speed applications and a 3.9mm aperture lens for long focal lengths, large sensor size, and laser applications are also offered, as well as the largest available 5.8mm clear aperture lens that has been designed for machine vision applications with long focal distance objectives, large sensors, or C-Mount objective lenses. The lenses are also available in development kits which include lenses, drive electronics, cables, and software for easy use and integration via USB-A connection. Versions with thermistor (temperature-dependent resistors) for temperature sensitive applications are also available.

**Note:** These products are sensitive to electrostatic discharge (ESD). Handling precautions should be taken to prevent accidental damage, such as using anti-static devices and storing products in static-safe containers when not in use.

Technical Information

#12-248 - Liquid Lens Driver Board - Maxim I<sup>2</sup>C/DC

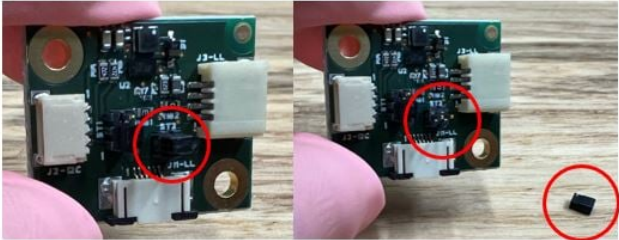


When using #12-248 with a Corning® Varioptic® A39Nx series lens, the jumper at ST2 must be removed to ensure optimal performance and product lifetime. Please contact us for updated user manuals with more information.

PRODUCTS WITH UPDATED USER INFORMATION WHEN USED WITH #12-247, #12-248, OR #17-123

| Stock No. | Description                                              |
|-----------|----------------------------------------------------------|
| #34-283   | Packaged A-30N0-P04 Liquid Lens (VIS)                    |
| #15-740   | Packaged A-30N0-P04 Liquid Lens w/ Thermistor (VIS)      |
| #19-354   | Packaged A-30N1-P04 Liquid Lens w/ Thermistor (NIR)      |
| #17-126   | A-39N0 Liquid Lens Development Kit (VIS)                 |
| #19-358   | A-39N1 Liquid Lens Development Kit (NIR)                 |
| #37-521   | 6mm FL, Liquid Lens M12 Lens                             |
| #37-522   | 8mm FL, Liquid Lens M12 Lens                             |
| #37-523   | 12mm FL, Liquid Lens M12 Lens                            |
| #37-524   | 16mm FL, Liquid Lens M12 Lens                            |
| #33-676   | 35mm, f/5, Liquid Lens Cx Series Fixed Focal Length Lens |
| #33-687   | 50mm, f/7, Liquid Lens Cx Series Fixed Focal Length Lens |

#12-247 - Liquid Lens Driver Board - Maxim USB

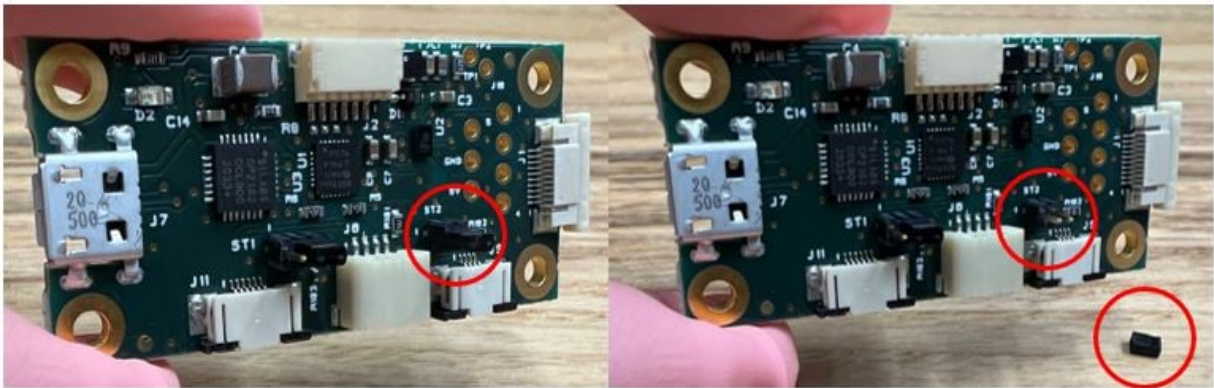

Jumper at ST2 plugged in

Jumper at ST2 removed

#12-248 - Liquid Lens Driver Board - Maxim I<sup>2</sup>C/DC



Jumper at ST2 installed

Jumper at ST2 removed

When using a Maxim driver board with a Corning® Varioptic® A39Nxseries lens, the jumper at ST2 **must** be removed to ensure optimal performance and product lifetime. Please contact us for updated user manuals with more information.

Special Handling

These optics require special handling to avoid damage and ensure long-term performance. Proper handling, cleaning, and storage are essential to maintain optical quality. Explore our [Optics Cleaning Resources](#) for step-by-step guides and best practices. For personalized assistance, [Email us](#) or [Chat](#) with our technical support team.



Component Handling Tools

---